



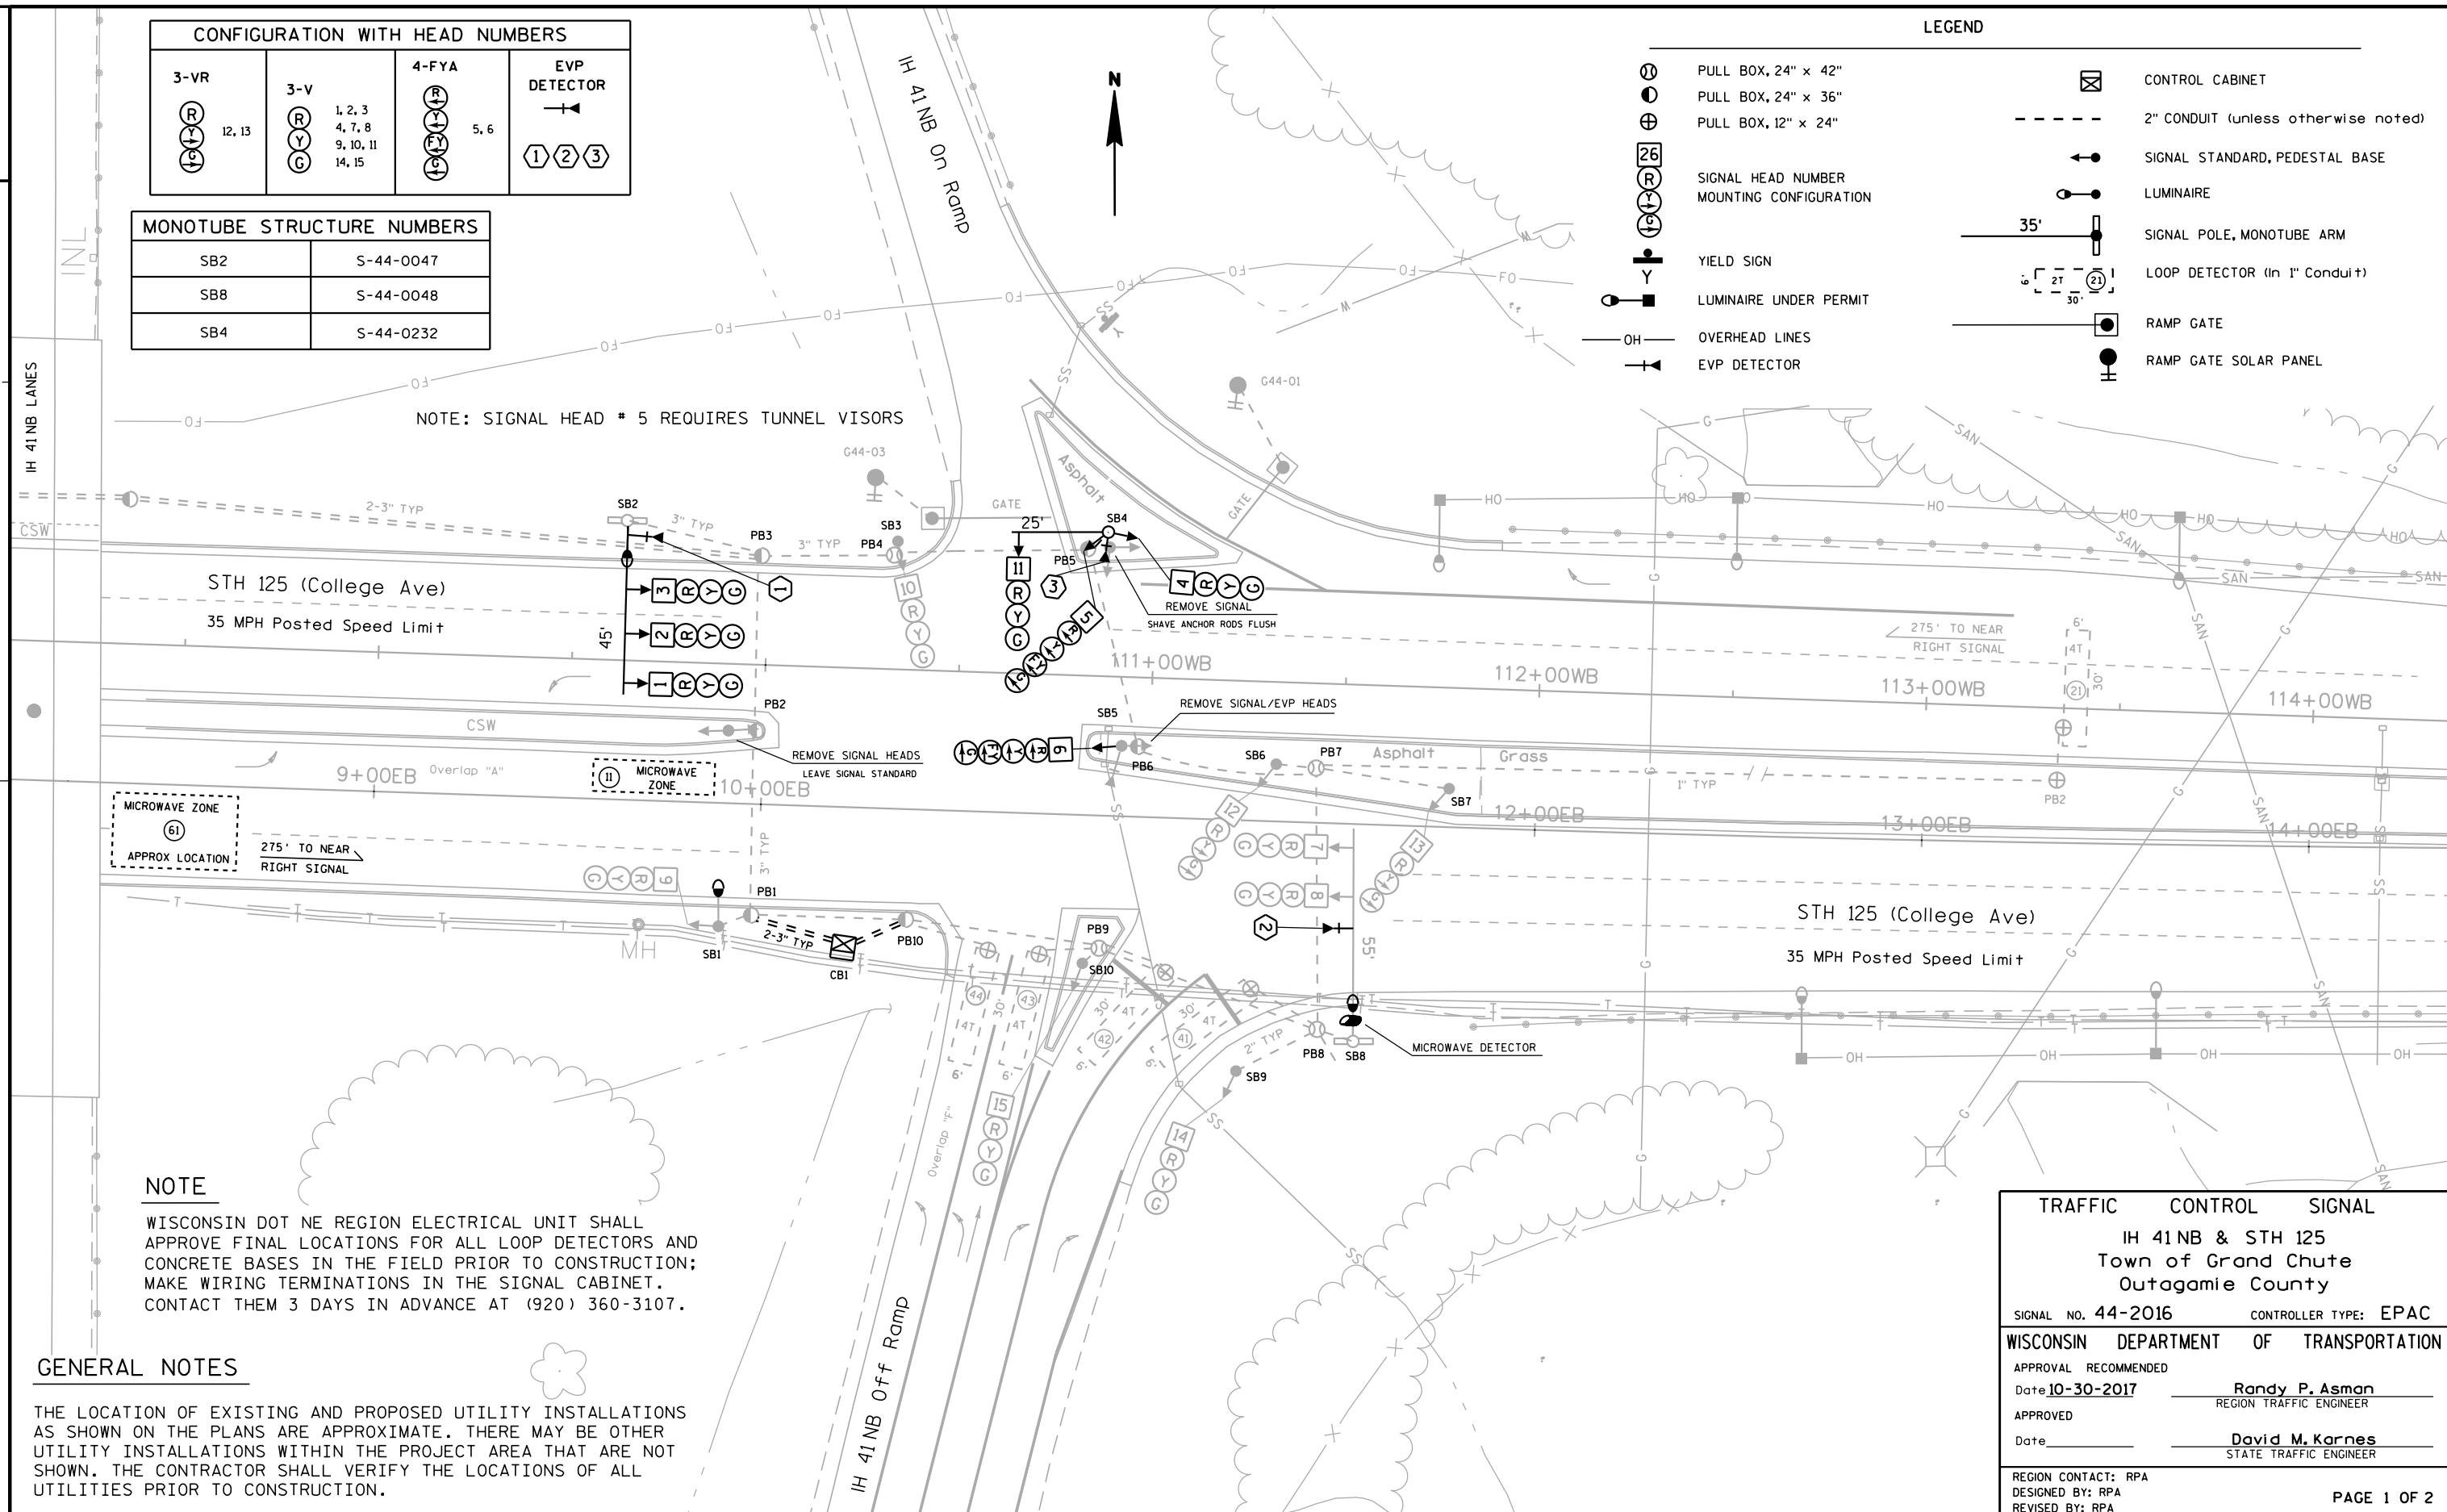

	HEAD NUMBERS	FLASH
Ø1	5, 6	-
Ø2	1, 2, 3, 4	R
Ø3		
Ø4	10, 11, 12, 13, 14, 15	R
Ø5		
Ø6	7, 8, 9	R
Ø7		
Ø8		
Ø2P		
Ø4P		
Ø6P		
Ø8P		
OLA	5, 6	R
OLB		
OLC		
OLD		

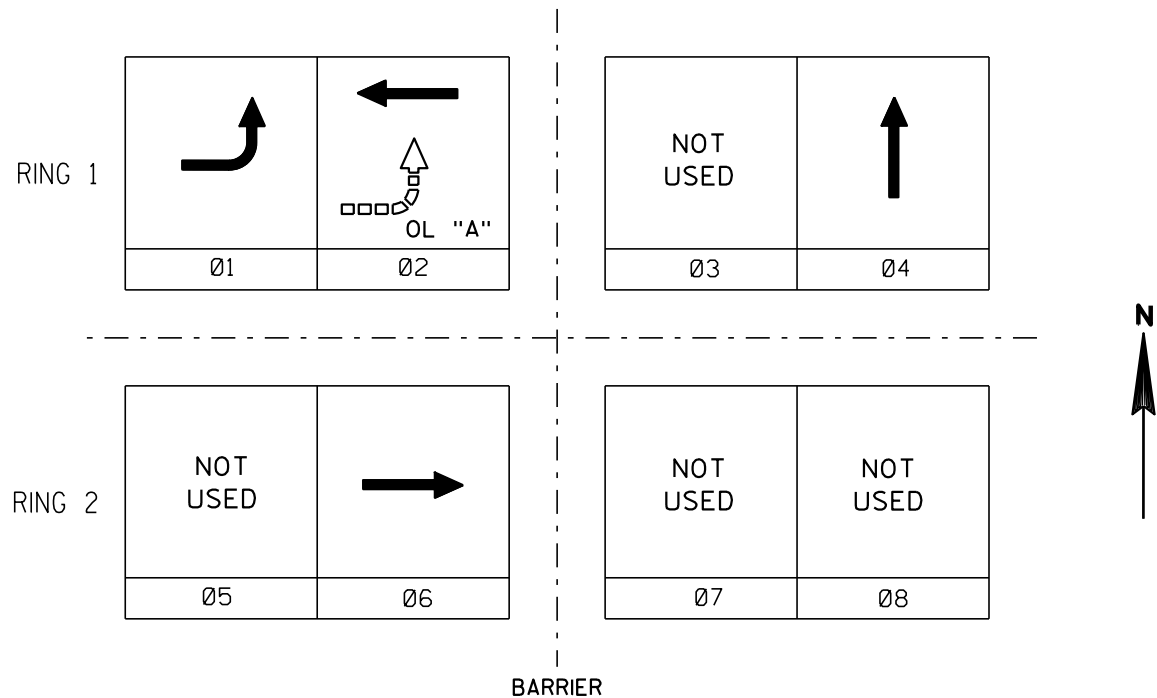

PHASE NUMBER	PHASE LOCKING	DUAL ENTRY W / Ø	PHASE RECALL	PHASE ACTIVE
1				x
2			MIN	x
3				
4				x
5				
6			MIN	x
7				
8				

TYPE OF INTERCONNECT/COMMUNICATION	
CELL MODEM	
CLOSED LOOP	
TWISTED PAIR*	
FIBER OPTIC*	x
FIBER OPTIC (ETHERNET)	
RADIO	

TYPE OF COORDINATION	
NONE	
TBC	x
TRAFFIC RESPONSIVE	
ADAPTIVE	
*LOCATION OF MASTER CONTROLLER NO:	S44-0329
SIGNAL SYSTEM #:	SS-0077

EMERGENCY VEHICLE PREEMPTION			
EMERGENCY VEHICLE DETECTOR	①	②	③
MOVEMENT	↔	↗	↑
PHASE	2+6	1+6	4
Tomar Channel	1	2	3

TYPE OF LIGHTING	
BY OTHER AGENCY	x
IN TRAFFIC SIGNAL CABINET	x
IN SEPARATE DOT LIGHTING CABINET	

TYPE OF PRE-EMPT	
NONE	
RAILROAD	
EMERGENCY VEHICLE	
GTT	
TOMAR	x
HARDWIRE	
3M	
LIFT BRIDGE	
QUEUE DETECTOR	

DETECTOR LOGIC

RACK # 1							
DETECTOR CHANNEL	3	1	7	5	11	9	15
PLAN LOOP DETECTOR *(S)	11	61	21	41	42		
ASSIGNED PHASE	1	6	2	4	4		
OPERATION MODE	Veh	Veh	Veh	Veh	Veh		
SWITCH TO PHASE							
EXTEND							
DELAY	Yes			Yes	Yes		
DETECTOR CHANNEL	4	2	8	6	12	10	16
PLAN LOOP DETECTOR *(S)				43	44		
ASSIGNED PHASE				4	4		
OPERATION MODE				Veh	Veh		
SWITCH TO PHASE							
EXTEND							
DELAY							

RACK # 2							
DETECTOR CHANNEL	19	17	23	21	27	25	31
PLAN LOOP DETECTOR *(S)							
ASSIGNED PHASE							
OPERATION MODE							
SWITCH TO PHASE							
EXTEND							
DELAY							
DETECTOR CHANNEL	20	18	24	22	28	26	32
PLAN LOOP DETECTOR *(S)							
ASSIGNED PHASE							
OPERATION MODE							
SWITCH TO PHASE							
EXTEND							
DELAY							

OVERLAP SPECIAL

	Protected	Permissive
OL "A"	1	2
OL "B"		
OL "C"		
OL "D"		

GENERAL NOTES:
1. PROVIDE FOR HAND CONTROL.

IH 41NB & STH 125 Town of Grand Chute Outagamie County	
SIGNAL NO. 44-2016	
CABINET: TS2	CONTROLLER: EPAC
DATE:	PAGE NO. 2 OF 2